


ADMIRAL

PRO POOL SERIES

ITEM # F-ADMRL



U.S. Patent No. D507,769S

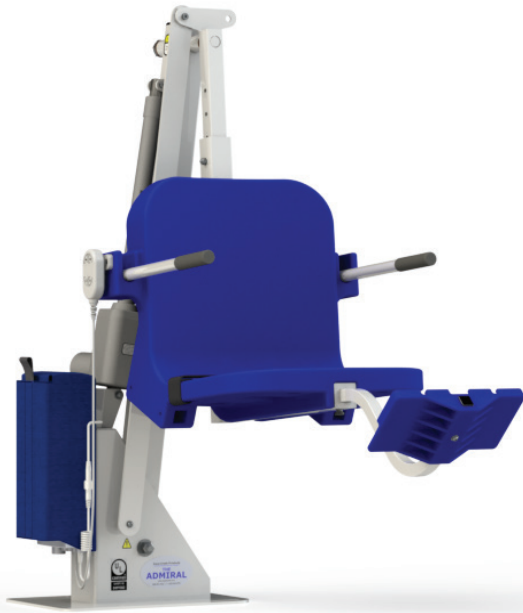

ABOUT

Similar to its sister model the Ranger 2, The Admiral brings to the table a unique, non-rotating design with the low profile and small footprint that makes it so popular for in-ground pools and spas. In addition to these reliable features you have come to know and trust, this lift offers an increased 450 pound weight capacity, adjustable seat height and the ability to adjust the base plate as needed to accommodate larger water drafts and setbacks.

Providing pool access to swimmers of all abilities in a strong, sleek design to compliment almost any décor, the Admiral can be customized to your needs in a number of accent colors, add-ons and accessories. You can choose from our standard accent color options, or ask about more customized colors.

FEATURES: ⚙️

- ADA Compliant & UL Safety Certified
- 450 lb (204 kg) weight capacity
- Adjustable base plate & seat height
- Field reversible
- Stainless steel construction with powder coat finish
- Limited five (5) year warranty
- Includes 24v rechargeable battery and charger
- Ships common carrier, some assembly required
- Made in USA

ACCENT COLORS 🎨

Available in a variety of accent and powder coat colors



*Blue seat standard (not a powder coat option)

PROUDLY SOLD BY:

Affordable recreation equipment for people of all abilities.

1.888.687.3552 | aquacreek.com | sales@aquacreek.com

ADMIRAL


APPLICATIONS

This lift works on in-ground and some partially raised pools and spas. To see if this lift works on your pool, visit our website and download the application guide, or contact our friendly sales team. This lift can also be anchored to pool decks made of concrete, pavers and even wood. Choose the appropriate anchor system for your needs. Anchors sold separately.

Standard Anchor



Standard w/Quick Attach Knobs

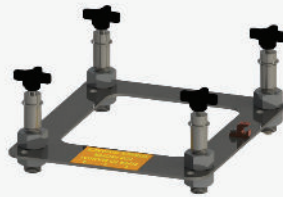

Paver Anchor



Wood Deck Anchor



For access to CADs, Revit drawings and more visit our Partner Login page on our website and become an Aqua Creek partner.

OPTIONS / ACCESSORIES

- Anchoring options for concrete, paver, and wood deck applications
- Chest strap for added upper body support
- Cover to protect your investment from the elements*
- Cycle attachment to convert to exercise bike
- Headrest for comfortable head support
- Powder coat and accent color options to match almost any decor
- Pull out leg rest for spa use
- Solar charging station to conserve energy
- Transport cart to easily store lift away when needed**

*Color and material options available

** Transport cart not usable with semi recessed anchor

PREMIUM COVER



Accessorize your lift with a cover to keep it looking like new and a solar charging station for an environmentally friendly power option.

SOLAR CHARGER



CUSTOM COLOR OPTIONS

Match your decor with a variety of custom color options.

